

# **PLA6442X**

DISHWASHER, SEMI INTEGRATED, ANTIFINGERPRINT STAINLESS STEEL,13 PLACE SETTINGS, 60 CM, ENERGY RATING A+++

13 place settings

Number of programs: 5 + 5 quick programs

Orbital washing system

Energy saving option EnerSave A+++

Buffer memory

Display: Delayed start display, Program duration

display, Time to end display

Delay timer option up to 24 hours, with automatic soak

Visual indicator: salt and rinse aid

Indication of program duration and acoustic signal of time to end

Varied distribution 1/2 load option FlexiZone

Grey baskets

Height adjustable upper basket on three

Upper basket with central fixed racks

Lower basket with double foldable racks

13 place setting sliding cutlery basket

Lower basket with anti-drop insert

Single hot/cold water max  $60^{\circ}\text{C}$  alimentation energy save up to 35%

Annual water consumption: 2380 l/year Annual energy consumption: 230 kWh/year

Noise level: 42 dB (A) RE 1 pW

Current: 10 A Frequency: 50 Hz Voltage: 220-240 V

# **Functions**











# **Plus and Options**



Appliances with this symbol can reduce energy consumption by a further 30% from the standard A energy rating.



# 13 plate settings:

The symbols show the number of plate settings of the dishwasher.



### **ORBITAL WASH SYSTEM:**

Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



### **DELAY TIMER:**

The delay timer can postpone the start of the program by up to 24 hours.



The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



### **Enersave:**

At the end of the drying cycle a special device slowly automatically opens the door a few centimeters, to ensure perfect drying and to save up to 20% of energy on some models.



### **Quick Time:**

The Quick Time option can reduce the length of the wash cycle up to 55%.

### Total acquastop:

Most models of Smeg dishwashers are equipped with Acquastop Totale, which allows to avoid flooding as a result of water leakage. The system consists of a a float sensor, disposed under the inner chamber of a dishwasher, which blocks water supply inside the appliance in case of water leakage into the lower tray. An additional electromagnetic valve on the water inlet hose also automatically blocks water supply if detecting water leakage in the hose. For Laundry: Total acquastop, the product is built with 3 levels of anti-flood devices to ensure protection against water leakage. For Laundry: Total acquastop, the product is built with 3 levels of anti-flood devices to ensure protection against water leakage.



### **FLEXITABS:**

Flexitabs adjusts the wash cycle to give the best possible results regardless of the type of detergent used.



# ♦♦♦ WATERSAVE:

8.5 it System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



# Noise Level:

42dB Excellent insulation and special devices keep noise to a minimum.



# **Programs**



## Soak programme:

The soak programme provides a rinse to prevent dirt from drying.



### **CRYSTAL:**

The crystal cycle is a particular programme designed especially for delicate dishes with light dirt.



### Eco:

Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



# Normal programme:

The normal programme is suitable for normal degrees of dirt for everyday use.



# Super:

The super programme is suitable for removing stubborn dirt.



# **RAPID 27 MINS:**

The rapid 27 mins quick program takes just 27 minutes to wash a load.



### Ultraclean:

The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



### Eco:

Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



### **Normal Quick:**

Program Normal Quick is suitable for quick washing of mixed dishes, for everyday use.



### STRONG & FAST:

This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.



